


1. TURN OFF POWER OF MOTOR FROM THE POWER POINT
2. Open the motor cover and view the diagram below and ensure that it matches with the inside of your motor.
3. Connect the **yellow** receiver cable to the PB.
4. Connect the black receiver cable to GND.
5. Connect the **red** receiver cable to +24V.
6. Turn power back on and ensure the receiver powers up.
7. Your two new remotes have been pre-programmed to the receiver.
Press button 1 on your new remote to ensure it can operate the door.

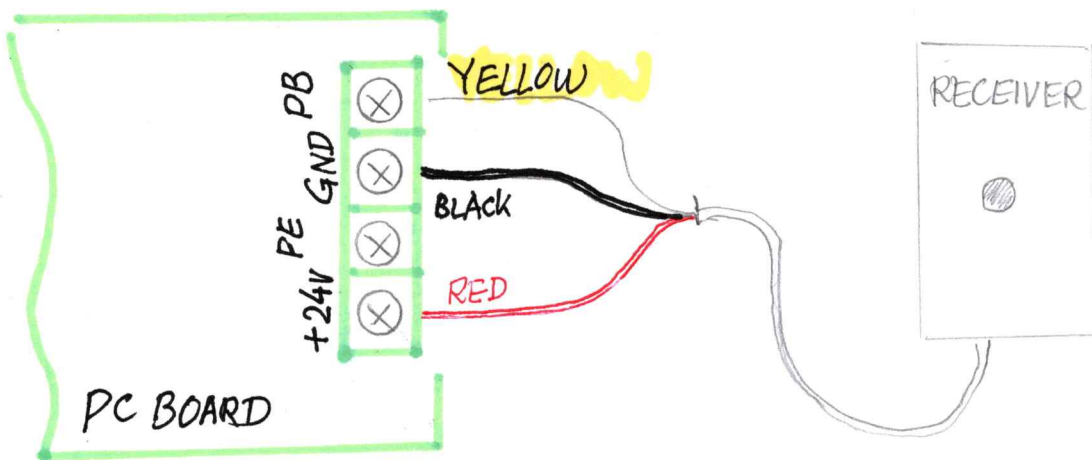

Coding new remotes

- 1: Press and release the Learn button in the middle of the receiver box LED will flash Step
- 2: Press and release any desired button on the new remote LED on receiver will be steadily on Step
- 3: Press and release the SAME button on the new remote again LED will flash quickly When the LED stops flashing and is steadily on, programming is complete. Press the programmed button to test.