

Liftmaster instruction

1. Press and hold the button on the new remote you wish to program to the door.
2. Press and release the orange or purple LEARN button which is located on the motor (generally found at the back of the motor or under the light cover).
3. The motor light will flash once to indicate the remote has been programmed.
4. Let go of all buttons and test the new remote.

www.magickey.com.au