

Matadoor Program and delete

- Rolling switches(if applicable)

The security code • rolling' switch should be operated as follows:

1. Press and release black programming button located on receiver board. (Red Pilot light will begin to flash) .
2. Press hand transmitter button for 1 sec and then release. (Red pilot light will stop flashing) .
3. Press hand transmitter button for another 1 sec and then release. (Red pilot light will flash for approximate 3 sec) .
4. When red pilot light stops flashing the programming sequence is complete. To program additional transmitters repeat steps 1-5.

Deleting stored codes: Your security code system will store up to 7 transmitter codes. If more than 7 transmitters are programmed, the system will systematically start to delete the previously programmed transmitter. (i. e. transmitter 8 is programmed then No.1 will drop out. If 8, 9, 10 are programmed the 1,2, 3 will drop out etc.)

To delete all stored codes: Simply press and hold the programming button, red pilot light will come on. When red pilot light switches off, all previously programmed transmitters will have been deleted.