Programming Nice Era-Inti Remote Control

Copying Code from Previous Remote

- 1. Hold your new and old transmitters so they are touching head-to-head.
- 2. Press and hold any button on your new remote until the LED of your old remote-control illuminates, then release.
- 3. The LED on your old remote control should now be blinking. Next, press and hold any button on your old remote until the LED of your new remote-control illuminates.
- 4. Release the button on your old remote control and wait for both remote LEDs to go out.
- 5. Test the operation of your new remote control!

Coding Directly To Your Receiver

- 1. Press the learning button on your receiver. The LED will turn on for 5 seconds. Complete step 2 within five seconds.
- 2. Press and hold any button on your new remote until the receiver LED turns off.
- 3. Release the remote button and wait two seconds.
- 4. Press and hold the same button on your new remote until the receiver LED flashes three times. If this does not happen, your remote control has not been programmed in.
- 5. Wait 5 seconds. Press the button on your new remote to test if it opens your garage/gate.

www.magickey.com.au