

## Program ZT-07 Remote to Sprint Motor

1. Press and hold the “P” and “+” buttons on the motor until all lights on the motor turn on and LED 7 flashes
2. Press the “+” button on the motor once (all LED lights turn off except LED 7)
3. Quickly press and release the required push button on your new remote twice (all LED lights turn on and LED 7 will begin flashing)
4. Press the “P” button once on the motor to save (LED 3 will switch on indicating that the remote has been successfully programmed)
5. Repeat above procedure for all additional handsets.

[magickey.com.au](http://magickey.com.au)