

Genesis & Genesis Optima

Programming New or Additional Handsets

The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Genesis or Genesis Optima garage door operator.

Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. Please refer to your Owners Manual for further information on this process.

Step 1:



Press the 'Code' button and '-.-' will become visible on the display.

Step 2:



Press and hold the desired button on your remote that you would like to operate your door until the dots shown on the display flash.

Step 3:



To program a single remote to operate multiple doors (up to 3), simply repeat these steps and select a different button for operation. Genesis openers can be programmed to be used by up to 15 remotes.

Your handset programming is now complete!



Should you require further assistance in programming your G+ remote, please contact your local Gliderol office on 1300 799 177.