


Step 1: Locate the **CODE SET** button on the wall control box (for MPC3, see below left picture) or control panel at the back of overhead drive unit (for MPC4, right picture)  
 → Press this CODE SET button for one second;

Step 2: Press any one of the top two buttons of the new remote for one second →  
 Programming completed! Press the same button to test. If no success, please repeat step 1&2.

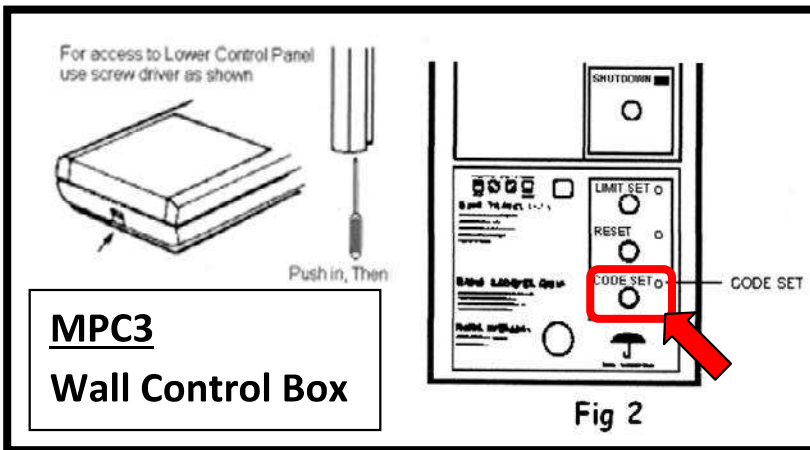

**Note: If you have an old remote which is still working, you will need to re-set the dip switches inside it to make it work along with the new remote.**

Step 1: Set the side switch, which is located on the left side of the old remote (see arrow in picture below) to **UP** position.

Step 2: Remove the battery cover, set the positions of the 8 dip switches inside as below →  
 Now your old remote should work



	1	2	3	4	5	6	7	8
+	*				*	*	*	*
0				*				
-		*	*					